

TB10045

Topic: New solenoid Part No 1502148		<u>TB No.:</u> 10045	<u>Date:</u> July 2017
Affected Machines:	PB5/ PB10	Priority: Low	Created By: Gareth Fitzpatrick
From Serial No.:		Created For: Technicians	Part Update
From Date:	Jan 2017	Pages:_1/2	

OVFRVIFW

Dispense solenoid 1502156 has been replaced with <u>1502148</u> as part of a part improvement. The only noticeable difference is the physical size of the solenoid coil which is larger.

It is not necessary to change existing machines, this is an updated part and will be used as a direct replacement to 1502156

Procedure

- The dispense solenoid you receive may have a different orientation to the one in the machine.
- There is two options to adjust the orientation

First option

Loosen the 10 mm screw on the top of the coil and rotate as necessary. Position 1


Second option

- Remove the four white securing pins and change the orientation of the inlet/ Outlet as desired. Position 2
- Secure in position with the 4 white securing pins.

Gareth Fitzpatrick Page 1 of 2



TB10045

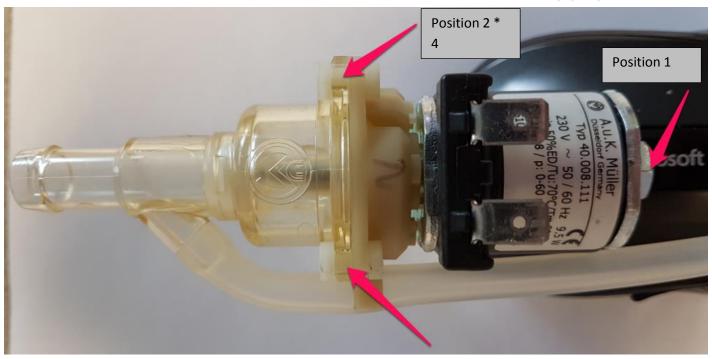

Gareth Fitzpatrick Page **2** of **2**